

KXPD1 MANUAL ERRATA

Rev. A-2, June 23, 2006

**THESE CORRECTIONS MUST BE MADE BEFORE YOU BEGIN ASSEMBLY,
OR YOUR KXPD1 PADDLES MAY NOT FUNCTION CORRECTLY**

1. **Page 2, Parts List:** Add the following items at the bottom of the list:

Hole Cover Label, 1 ea., Part Number E980096


Washer, Flat, SS, 0.010 Thick, #6, 1 ea., Part Number E700117

Lock Washer, Internal Tooth, #6, 1 ea., Part Number E700095

2. **Page 5, last step:** Add the following paragraph:


“Place a #6 washer on the thumb screw before threading it into the bracket. Both a flat washer and a lock washer are supplied. Only use *one* washer. The lock washer should provide better resistance to vibration in rough use such as pedestrian mobile operation, but may mark the surface of the bracket around the thumb screw hole.”

3. **Page 5, Figure 7:** Annotate the figure to show the addition of a washer to the thumb screw as shown below:

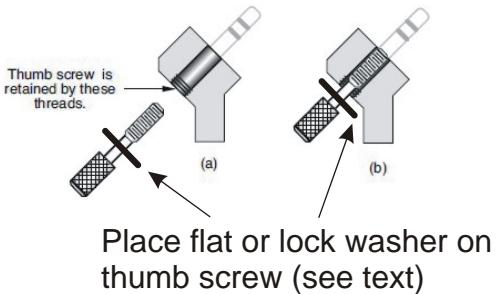

4. **Page 7, After first step at top of page:** Cut out the following step and illustration and add them before “Contact Spacing Adjustment”, or add a note to the page to refer to this errata at that time:

After you have confirmed that both paddles work properly, remove the backing from the adhesive hole cover and position it to cover the exposed terminals as shown below. Be careful not to cover either thumb screw hole.

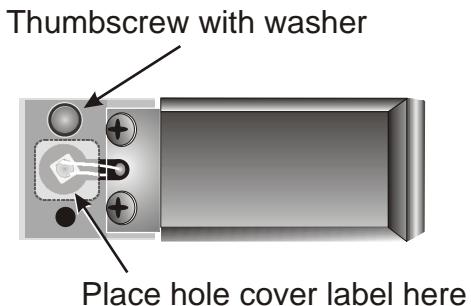

Page 7, last paragraph: Change **BAND** to **MENU**.